

**No Cleaning — No Cross Contamination — Reduce Costs**

# Disposable Liqui and Visco Thief

## Liquid and Cream Sampling Without Costly Cleaning

Two models are available which make sampling liquids, creams and pastes very easy. The LiquiThief and ViscoThief have been designed to be rigid, this ensures that the operator knows exactly the depth at which each sample is taken.

- Features:
- Fully welded construction (no adhesives or screws are used)
  - Assembled in a medical clean room
  - Each sampler is individually wrapped
  - Made from HDPE or PP (FDA acceptable grade conforms to CFR 177.1520)
  - FDA acceptable silicone rubber is used for the piston seal - CFR 177.2600
  - ATEX Rated for Zones 0,1 & 2

- Options:
- Pre-sterilised


**ATEX Rated  
Zones: 0,1 & 2**



## LiquiThief or ViscoThief?


The LiquiThief and ViscoThief are essentially the same except for the size of the hole in the tip. The LiquiThief has a small hole (for sampling low viscosity liquids) and the ViscoThief has a large hole (for sampling high viscosity liquids and creams).

**LiquiThief Tip**



1.5mm  
diameter hole

**ViscoThief Tip**



10mm  
diameter hole


## Why Use A Disposable Sampler?

There are many reasons why a disposable sampler should be used:

- Cleaning costs - often the cost of cleaning is less than the cost of the sampler.
- No cleaning validation costs
- No cross contamination worries

### How to use:

1. Insert the sampler into the product
2. At the required depth pull up the handle. The sample will be drawn into the sampler
3. Withdraw sampler
4. Push down handle to expel the sample

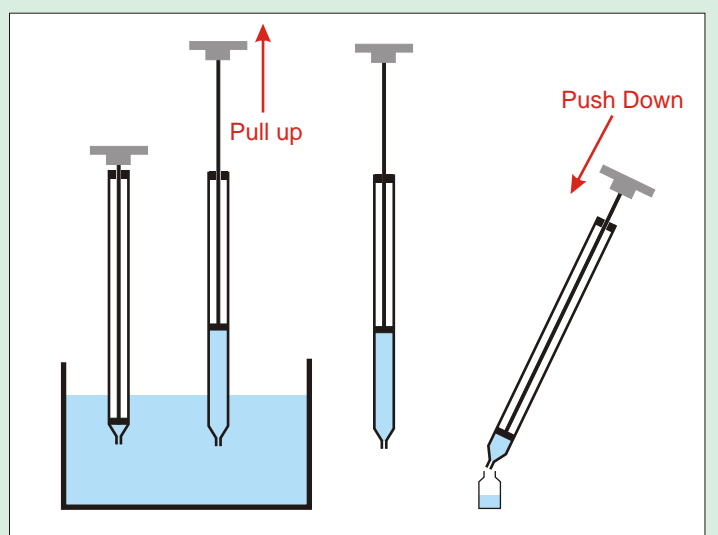

**No Cleaning — No Cross Contamination — Reduce Costs**

## Disposable Liqui and Visco Thief cont.....

Different sampler lengths mean that both small and large containers can be easily sampled



Ergonomic Handle - makes sample taking easy

Clutch - Built in clutch makes the sampler operate smoothly



### Disposable LiquiThief

(Suitable for liquids such as water and light oils)



Part No.	Sampler Length	Pre-Sterilised	Max. Sample Volume	Material	Outer Diameter	Quantity per box
8050H-500	500mm	No	100ml	HDPE	21mm	20
8050H-1000	1000mm	No	190ml	HDPE	21mm	20
8050H-500S	500mm	Yes	100ml	HDPE	21mm	20
8050H-1000S	1000mm	Yes	190ml	HDPE	21mm	20
8050P-500	500mm	No	100ml	PP	21mm	20
8050P-1000	1000mm	No	190ml	PP	21mm	20

### Disposable ViscoThief

(Suitable for creams, pastes and gels)



Part No.	Sampler Length	Pre-Sterilised	Max. Sample Volume	Material	Outer Diameter	Quantity per Box
8055H-500	500mm	No	100ml	HDPE	21mm	20
8055H-1000	1000mm	No	190ml	HDPE	21mm	20
8055H-500S	500mm	Yes	100ml	HDPE	21mm	20
8055H-1000S	1000mm	Yes	190ml	HDPE	21mm	20
8055P-500	500mm	No	100ml	PP	21mm	20
8055P-1000	1000mm	No	190ml	PP	21mm	20

**Discounts Available for Bulk Orders or Yearly Contracts**