

No Cleaning — No Cross Contamination — Reduce Costs

Disposable Powder Lance

Cross Sectional Sampler - No Cleaning Required

The Disposable Powder Lance is ideal for taking a cross sectional sample from within a bulk powder.

- Suitability:
- Cohesive and some free-flowing powders
- Features:
- Cross sectional sample
 - Max Sample Volume: 170ml (approx.)
 - Individually wrapped
 - Assembled in a medical cleanroom
 - Made from HDPE (FDA acceptable grade - conforms to CFR 177.1520)
 - ATEX rated for Zones 0,1 & 2
- Options:
- Pre-sterilised


Operation

The Disposable Powder Lance is quick and easy to use:

1. Push the Disposable Powder Lance into the product and then withdraw
2. Then deposit the sample into a suitable container
3. Place the used sampler into its plastic bag



The Powder Lance is available in two convenient lengths

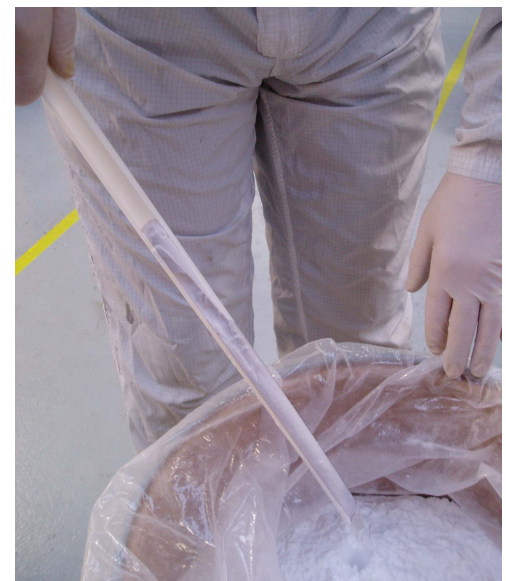

Part No.	Pre-Sterilised	Blade Length	Overall Length	Nominal Sample Volume	Material	Overall Diameter	Quantity per Box
8063H-500	No	500mm	620mm	100ml	HDPE	22mm	20
8063H-500S	Yes	500mm	620mm	100ml	HDPE	22mm	20
8063H-1000	No	830mm	950mm	170ml	HDPE	22mm	20
8063H-1000S	Yes	830mm	950mm	170ml	HDPE	22mm	20