

Disposable Slot Sampler

SteriWare®


Cross Sectional Multilevel Sampler

The Disposable Multilevel Slot Sampler is ideal for taking a cross sectional sample from powders and granules. The Disposable Slot Sampler is part of our range of SteriWare®, see page 3 for details.

Suitability: • Free-flowing and some cohesive powders

- Features:
- Cross sectional sample
 - Max Sample Volume: 170ml (approx.)
 - Individually wrapped
 - Assembled in a medical cleanroom
 - Made from HDPE (FDA acceptable grade - conforms to CFR 177.1520)
 - ATEX rated for Zones 0,1 & 2 (Contact us for full details)


Options: • Pre-sterilised

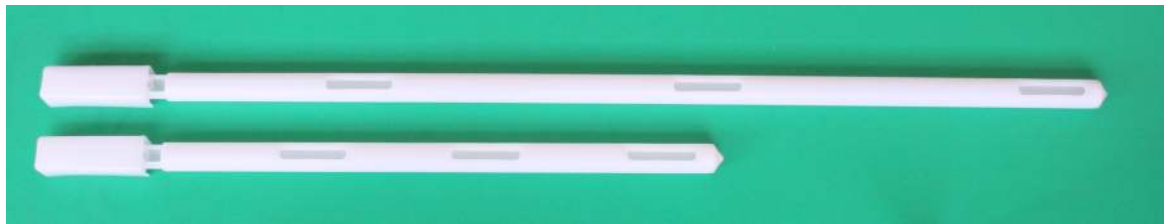

Operation

The Disposable Slot Sampler is quick and easy to use:

1. Push the sampler into the product
2. Rotate handle to open up slots
3. After leaving the sampler for several seconds to allow powder to enter, rotate handle to close the sampler.
4. Remove sampler
5. Slide the inner rod out of the outer tube
6. Deposit the sample into a suitable container

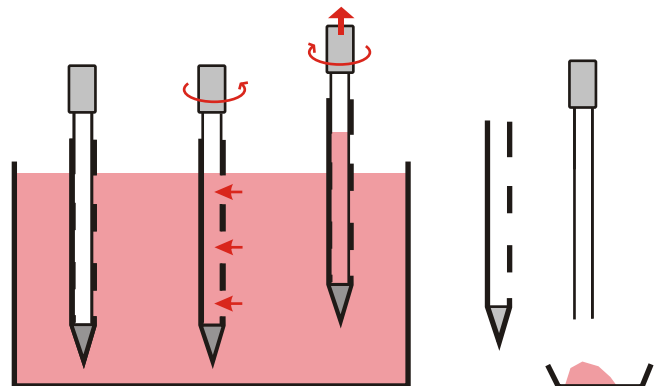

SteriWare®



**NEXT DAY
DELIVERY**

Part No.	Pre-Sterilised	Overall Length	Nominal Sample Volume	Material	Overall Diameter	Quantity per Box
8073H-500	No	620mm	100ml	HDPE	22mm	20
8073H-500S	Yes	620mm	100ml	HDPE	22mm	20
8073H-1000	No	950mm	170ml	HDPE	22mm	20
8073H-1000S	Yes	950mm	170ml	HDPE	22mm	20

Discounts Available for Bulk Orders or Yearly Contracts