

No Cleaning — No Cross Contamination — Reduce Costs

Disposable Powder Thief

Best Selling Powder Thief

The Disposable PowderThief is ideal for taking representative samples from known locations within the bulk powder. These devices are available in two convenient lengths and four sample volumes.

- Suitability: • Powders and granules
- Features: • Single point sample
• Range of sample volumes available
• Fully welded construction (no adhesives or screws are used)
• Assembled in a medical clean room
• Individually wrapped
• Made from HDPE (FDA acceptable grade conforms to CFR 177.1520)
• ATEX Rated for Zones 0,1 & 2
- Options: • Available pre-sterilised




PowderThiefs are available with different tip sizes up to 20ml.
1ml, 5ml and 10ml Tips are shown in the photograph



How to use:

1. Insert the sampler into the product. Ensure that the tip is inside the sampler body
2. At the required depth pull up the body to expose the tip. The sample will fall in around the tip
3. Push down body of the sampler to trap the sample
4. Withdraw sampler
5. Pull up body to empty sample

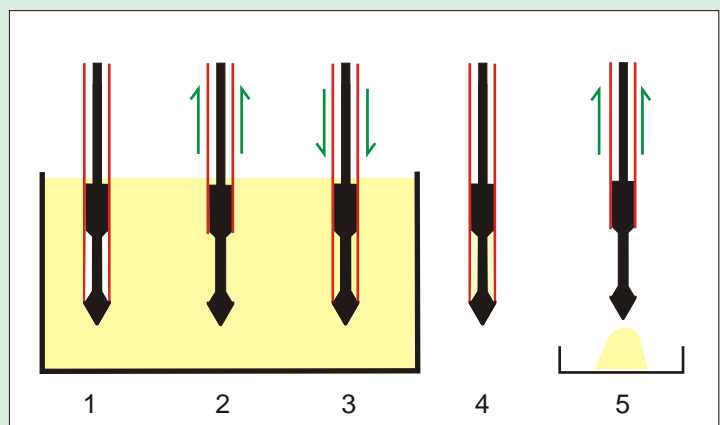

Note: Other sizes available between 1 and 20ml - subject to minimum order quantities



Part No.	Pre-Sterilised	Tip Size	Overall Length	Material	Overall Diameter	Quantity per Box
8060H-501	No	1ml	500mm	HDPE	21mm	20
8060H-505	No	5ml	500mm	HDPE	21mm	20
8060H-510	No	10ml	500mm	HDPE	21mm	20
8060H-520	No	20ml	500mm	HDPE	21mm	20
8060H-501S	Yes	1ml	500mm	HDPE	21mm	20
8060H-505S	Yes	5ml	500mm	HDPE	21mm	20
8060H-510S	Yes	10ml	500mm	HDPE	21mm	20
8060H-520S	Yes	20ml	500mm	HDPE	21mm	20
8060H-1001	No	1ml	1000mm	HDPE	21mm	20
8060H-1005	No	5ml	1000mm	HDPE	21mm	20
8060H-1010	No	10ml	1000mm	HDPE	21mm	20
8060H-1020	No	20ml	1000mm	HDPE	21mm	20
8060H-1001S	Yes	1ml	1000mm	HDPE	21mm	20
8060H-1005S	Yes	5ml	1000mm	HDPE	21mm	20
8060H-1010S	Yes	10ml	1000mm	HDPE	21mm	20
8060H-1020S	Yes	20ml	1000mm	HDPE	21mm	20